



Digital Temperature Controller



www.foxeng.co.kr




FOX-T1004

DAE SUNG ENG
www.foxeng.co.kr

Setting Temp.

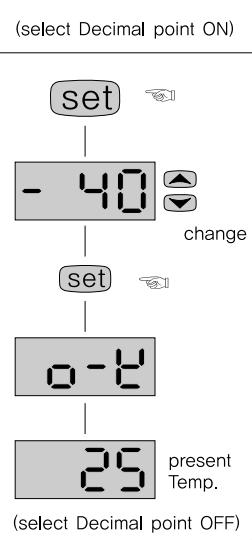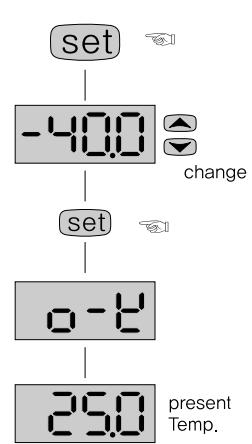


Program Setting

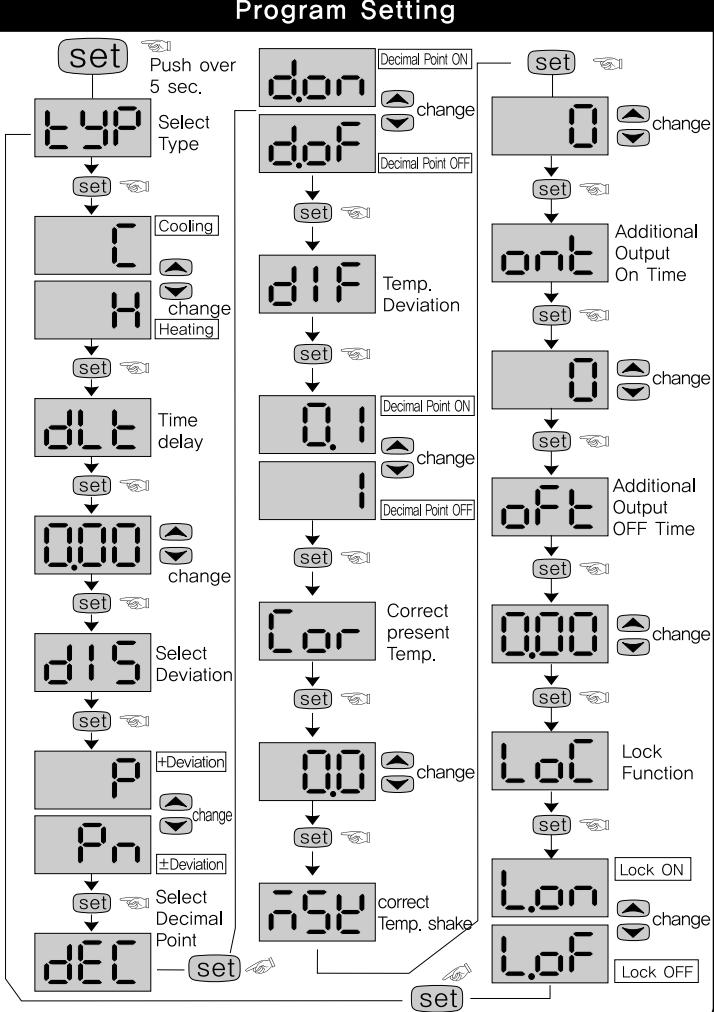

* After you push [set] key, one after setting off and then, be closed after confirmation of 0 ~ 2 later or present temperature automatically after 10 sec.

3. Connection

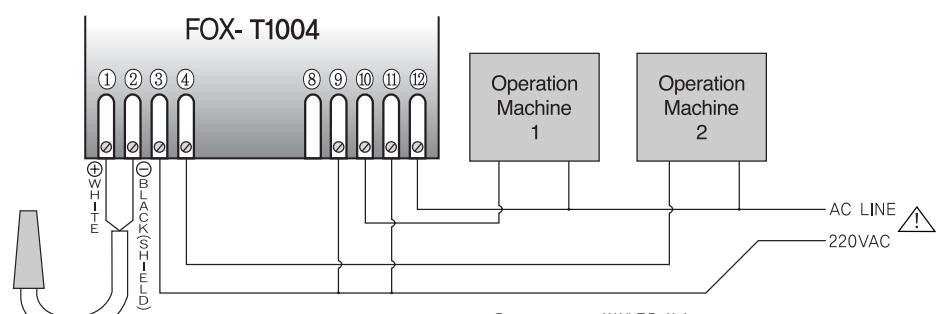

* Output : 220V 2A


Please make use of surely the power relay or magnet.

Explanatory for Auto temp. controller

Model	Temp. Range	Sensor	Output	Function
FOX-T1004	-40.0°C ~ +90.0°C	Diode	2Relay	User Deviation/Indication of a decimal point, select function

* Thank you for selecting our products. Please read carefully this instruction to reduce any damages or operation mistakes.

1. Part name

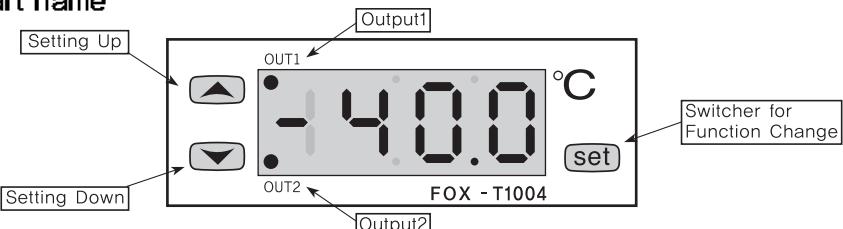

2. Changing User Mode / Installer Mode Function

• Changing User Mode

When [set] key push, Change this key for setting value.


• Setting for Installer Mode Function

When push [set] key push over 5 second, set as following order TYP(select Type), DLT(time delay), DIS(select deviation for user), DEC(select decimal point), DTF(Temp Deviation), COR(correct Present Temp.), MSK(correct the temp. shake), ONT(additional output ON time), OFT(additional output OFF time), LOC(Lock Function) setting each mode should change key. to move next mode push [set] key.

MODEL	Function	Indication	FOX-T1004	Setting value when deliver	Remarks
User Mode (set Temp.)	When select decimal point		-40.0 ~ 90.0°C	10.0	
	When not select decimal point		-40 ~ 90°C	10	
Installer	select TYPE		Cooling / Heating	C	
	Time delay		00.0 ~ 19 Min 59 Sec	0.00	
	select Deviation		+Deviation ±Deviation	P	
	select a decimal point		Decimal point ON Decimal point OFF	Don	
Mode	Temp. Deviation		0.1 ~ 19.9°C	0.1	
Setting	correct present Temp.		-5.0 ~ 5.0°C	0.0	
	correct Temp. shake		0 ~ 19	0	
	additional Output ON Time		0 ~ 240Min	0	Auth. ON Time, if 0.0 Time don't use this item, also no specified result.
	additional Output OFF Time		0.00 ~ 19100 Sec 59Min	0	
	Lock Function		Lock ON Lock OFF	Loc	

* When ON time of additional output set, can't use output.

4. Size & Dimesion

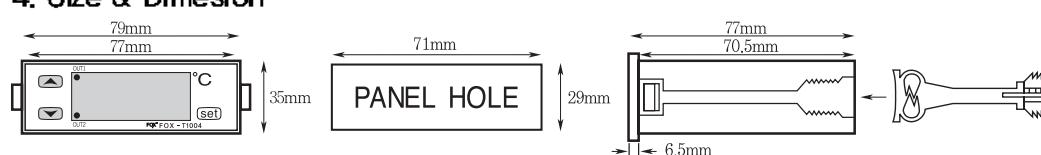

5. CAUTION

Pls use this item after set up safety device doubly in which is applied at dangerous equipment such as serious human injury or serious damages property & important machine because this item is not designed as safety device.

- Do not dismounting or wires or install device for the occurrence of an induction load of motor, solenoid or same power with other device.
- Please use shield wire when sensor lengthen, however, do not make it too much longer.
- Please do not use the components which is occurring arks when on/off near it or same power.
- Power cable keeps away from high-voltage cable and do not install the device where water, oil and dust.
- Do not install the device from direct rays of the sun & exposed a site due to rain.
- Do not install the device from strong magnet & noise, vibration or shock.
- Please install the device from a great distance out of places occurring strong-alkali or strong-acidity.
- Do not sprinkle water for clean purpose when installing in the kitchen.
- Do not install the device from the places where Temp/Humi. exceed regular power.
- Please use the sensor wire without any cutting & flaying.
- Do not install the sensor wire nearby signal wire, power or load and Please use self-pipe.
- Please understand can't get any A/S service when you open or re-model it with fire.
- is the safety letter like warning, caution in the connection.
- Please do not use the device close by which occurring strong high-frequency noise (high frequency welding, sewing machine, wireless transmitter, SCR controller for high capacity).
- Please use this item proper method without any damage or injury.

Caution, Danger of electric shock

- Electric shock - Do not touch AC board during on power because of electric shock.
- Please intercept input power surely when input power check.

The way of diagnosis for breakdown

■ Indicating ERROR on using items (E-1)

- This is the damage of memory data for various of inner-Data due to be get noised strongly from outside while using this items. Please request us A/S by return. Although our controller is designed as the complementary measures regarding these noise from outside, it is not endurable against these noise with endlessly.
- If noise (2kv) disordering inflow, the inner-part will be damaged.
- When shows these letter (open error) (short error), error in sensor. Pls check sensor.

* Above Products information can be changed to improve it's quality without any notification. When this products use, pls observe the information of caution & Warning due to give rise to disordering.

- H. Office : 56, Ballyongsandan 1-ro, Jangan-eup, Gijang, Busan, Republic of Korea
- Factory : 56, Ballyongsandan 1-ro, Jangan-eup, Gijang, Busan, Republic of Korea

■ TEL : +82-51-819-0426
■ FAX : +82-51-819-4562

■ e-mail : conotec@conotec.co.kr
■ URL : www.conotec.co.kr

* This device works proper operation with:
Surrounding Temp. : 0°C~60°C
Surrounding Humi. : below 80%RH
Regular power : 220VAC